



Initial Setup



The Nest Thermostat has many advanced features when it comes to controlling the temperature and comfort of the air in your home. Some of these features, if not setup correctly, can conflict with manual adjustments you might make. We recommend you use the thermostat with these features turned OFF in the beginning until you have a chance to see how your home responds with outdoor temperature changes.

Checklist

- Clear existing schedule and history
- Turn off NEST Sense
- Check ECO Min/Max temp (set 1-2 degrees past comfort)*
- Setup Wi-Fi
- Download App ([App Store](#), [Google Play](#))

30-Day Monitoring

For the first 30 days, monitor the temperature and comfort level of your home. Try to set a temperature and do not touch it during that time. Take notes on the temperature in the morning, afternoon and evening. After 30 days, decide if you think the advanced features are for you.

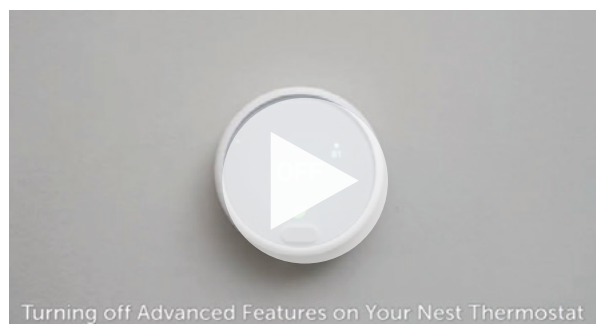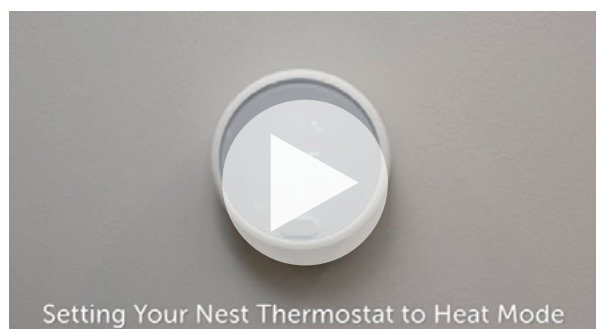

**NEST CUSTOMER
SERVICE**

**CUSTOMER CARE
WARRANTY REQUEST**

Setting Your Nest Thermostat to ECO Mode



Setting up ECO Mode

ECO mode allows the room temperature to stray from the normal schedule when your home is not occupied. The ECO mode allows you to set a temperature range between 40-90 degrees so before using this feature, please ensure your ECO temperature is set correctly. We recommend starting out between 1-2 degrees beyond your comfort temperature.

Setting to OFF Mode

When performing maintenance on your system or troubleshooting an issue, you might need to turn your NEST to the OFF mode. This means that it will ignore all other settings and not signal your HVAC to turn on. As an example, we recommend doing this when changing your air filters. Remember for your system to resume normal activity, you will need to turn it back on either from the thermostat or on the mobile app.

Google Nest Support: 855-469-6378. Select Option 3.

**NEST CUSTOMER
SERVICE**

**CUSTOMER CARE
WARRANTY REQUEST**